


Solinst® Mini Water Level Meter: Op Instructions


[More Info](#) | [Instructions](#) | [Get Quote](#)

Model 101M

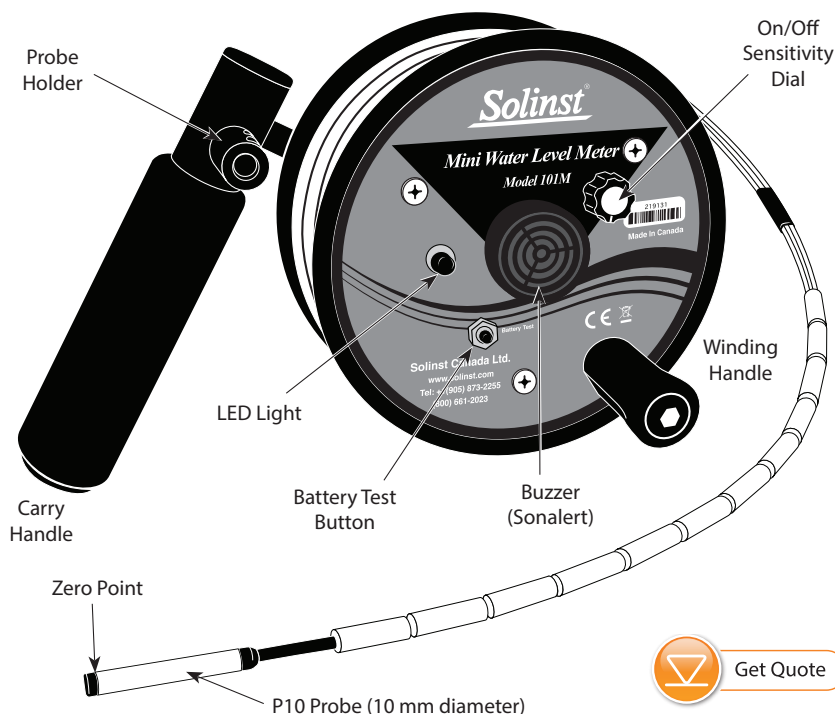

Water Level Measurements

1. Turn the water level meter on. The zero measurement point on the P10 Probe is near the tip.
2. Feed the tape into the well. If a tape guide is used, lay the tape onto the groove on the top. Measurements will be read at the point of the V-notch on the tape guide. Remember to deduct 2/10 ft or 6.0 cm.
3. The light and buzzer activate when the probe tip enters water. To ensure accuracy, lower and raise the probe a few times and then record the depth measurement from the tape at the top of the well.

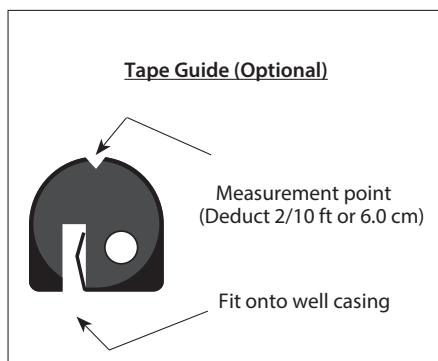

Equipment Check

1. Turn sensitivity dial **fully clockwise**.

Notes: 1. Clockwise rotation of sensitivity dial turns meter on and increases sensitivity.
2. Always set dial to highest sensitivity position, then decrease if necessary.

2. Depress the Battery Test button to test the battery and main circuitry.
3. Submerge the probe in tap water to test the probe. This completes the circuit and activates the buzzer and light.

Routine Care

1. After the depth to water has been recorded, the tape should be carefully rewound onto the reel, the probe wiped dry and placed into the probe holder.
2. The probe, weights, tape and reel can be wiped clean with phosphate free (non-abrasive) detergent and water. Do not submerge the reel.

Battery Replacement

- Battery type - alkaline, 9 volt.
1. The battery is housed within the faceplate of the reel.

2. Using a Phillips screwdriver, remove the three screws on the faceplate.
3. Carefully remove the faceplate so as to not unwind the tape. Note that there is an elastic band keeping everything together in the faceplate.
4. While leaving the elastic band in place, replace the battery.
5. Carefully place the faceplate back onto the hub and line up the holes.

Note: Before screwing the faceplate back onto the hub, make sure no wires are outside the hub.

6. Once the screws have been tightened and the faceplate is secure, test the water level meter.

Replacement Parts

The following parts can be provided should components become lost or damaged.

1. Lights, dials, etc.
2. Reels
3. Replacement tape with probe (complete)
4. Weights

Troubleshooting

SYMPTOM	CAUSE	REMEDY
No sound when probe immersed in water.	Dead battery.	Replace with 9V Alkaline.
	Water Conductivity is very low.	Increase sensitivity dial setting (turn clockwise) or call Solinst for assistance.
	Disconnected wires on circuit board.	Check all connections inside hub of reel for loose/disconnected wires - solder or reconnect.
	Broken wire in tape.	Contact Solinst to obtain parts/repair instructions.
	Disconnected wire inside probe.	Contact Solinst to obtain parts/repair instructions.
Instrument continuously sounds after being immersed in water.	Water in probe. Probe may be dirty which could interfere with the circuit connection.	Contact Solinst for instructions to clean or replace the probe.

(#118125) May 25, 2026

Solinst Canada Ltd. 35 Todd Road, Georgetown, Ontario Canada L7G 4R8
Tel: +1 (905) 873-2255; (800) 661-2023 Fax: +1 (905) 873-1992
E-mail: instruments@solinst.com www.solinst.com